

H339701 MEGAN PENDANT

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOUILD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.
- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1.	Feed the cord through the screw collar, canopy, nipple, and mounting plate until you desired hanging height is met.	STEP 6.	wrap the wire nut with electrical tape. Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could
STEP 2.	Tie an overhand knot to secure wire in place above the nipple, and trim off excess wire to min 6" beyond the knot. Strip each wire end 5/8"		cause a dangerous short circuit. FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SERIOUS INJURY OR
STEP 3.	Attach the mounting plate to the outlet box using the		DEATH!
	mounting screws.	STEP 7.	Carefully place wires into Outlet Box.
STEP 4.	Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect	STEP 8.	Place the canopy with the fixture over the outlet box and fasten it by the screw collar.
	ground wire to green screw on the mounting plate.	STEP 9.	Install the lamp. The fixture is rated for 60 watt A lamp.
STEP 5.	Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly	STEP 10.	DO NOT EXCEED RECOMMENDED WATTAGE! Restore power to the circuit at breaker or fuse box.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store.


CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.



H339701 MEGAN PENDANT

ASSEMBLY AND MOUNTING DIAGRAM

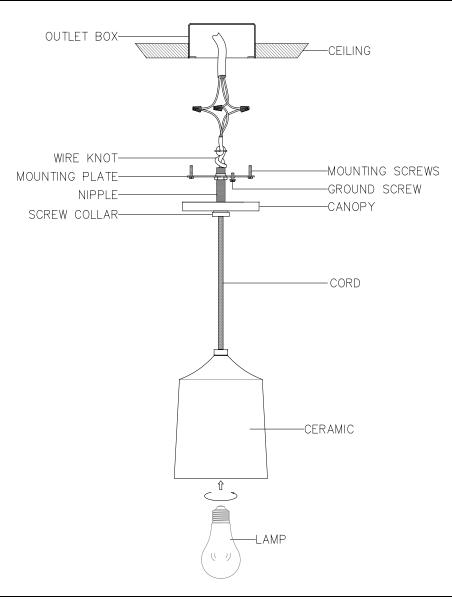

WIRE NUT/TAPING DIAGRAM

