

Please go to www.quirzel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 27W

Fixture Hanging Height: Minimum Hanging Height is 32", Maximum Hanging Height is 81.5".

Estimated Assembly Time: 30-45 minutes

 
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Package Contents

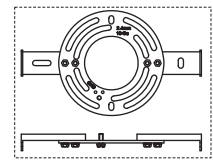


A Crossbar Assembly
x 1

 


B Mounting Screw
x 2

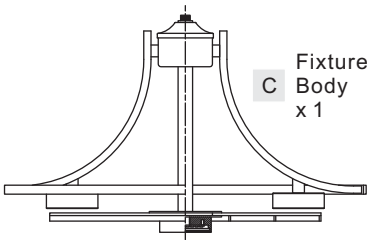 


C Fixture Body
x 1

 

D Ceiling Canopy
x 1

 


E Fixture Chain
x 1

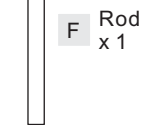 


F Rod
x 1

 
G Crystal Strings




Crystal String A
x 16

 

Crystal String B
x 16

 


Crystal String C
x 11

 


Crystal String D
x 11



 
Crystal String E
x 7



Crystal String F
x 7

 

Crystal String G
x 4

 

Crystal String H
x 4



Crystal String I
x 1

STEP 1 - Install Rod

A. Thread the Rod (F) onto the top center of the Fixture Body (C) and hand tighten until snug.

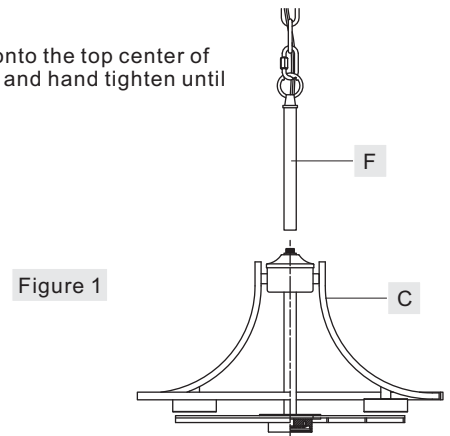 


Figure 1

STEP 2 - Attach Crossbar Assembly to Outlet Box

A. Attach the Crossbar Assembly (A) onto the outlet box and secure with outlet box screws (not included). Hand tighten until snug.


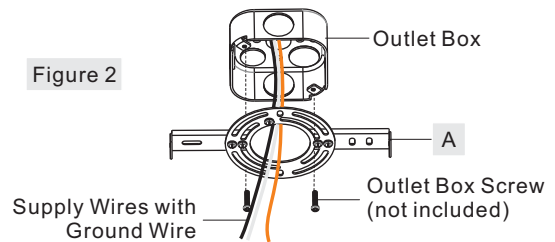 


Figure 2

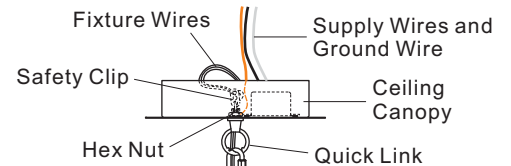 

STEP 3 - Adjust the Fixture Chain

A. Adjust the Fixture Chain (E) to your desired length by removing links if needed. Put a cloth over the Fixture Chain (E) to protect the finish.
B. Move the safety clip next to the hex nut in the center of the Ceiling Canopy (C). Carefully tuck all slack fixture wires inside

Figure 3

(Step 3 Continued)

of the Ceiling Canopy (C).

Suggested chain length for Ceiling height :
 8' ceiling : use 3 link of chain and 2 quick links
 9' ceiling : use 13 links of chain and 2 quick links
 10' ceiling : use 23 links of chain and 2 quick links

STEP 4 - Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

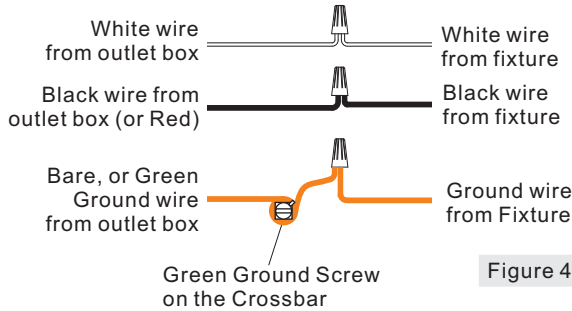 


Figure 4

STEP 5 - Attach Ceiling Canopy to Crossbar Assembly

- A. Fit excess cord and electrical wires in the Ceiling Canopy (C) properly. Line up the holes on the side of the Ceiling Canopy (C) to the mounting holes on the Crossbar Assembly (A). Secure them with Mounting Screws (B). Tighten until snug.

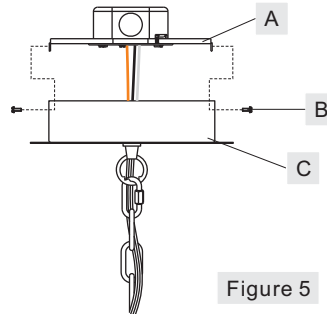 


Figure 5

STEP 6 - Attach Crystal Strings

- A. (Refer to CRYSTAL STRINGS DISTRIBUTION) Attach Crystal Strings (H) to rings in order: G and H — I — E and F — C and D — A and B.

Your fixture is now assembled and ready to use. Enjoy!

CRYSTAL STRING DISTRIBUTION


 
 
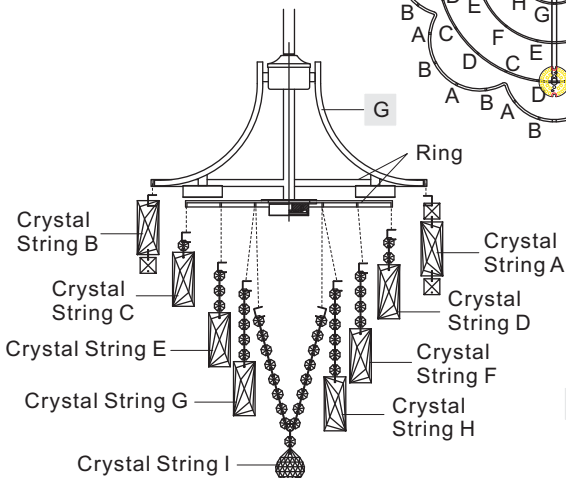 


Figure 6

PCBO2816C

 FINISH: POLISHED CHROME

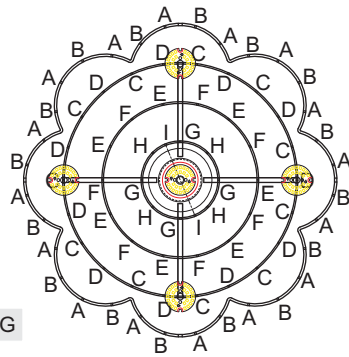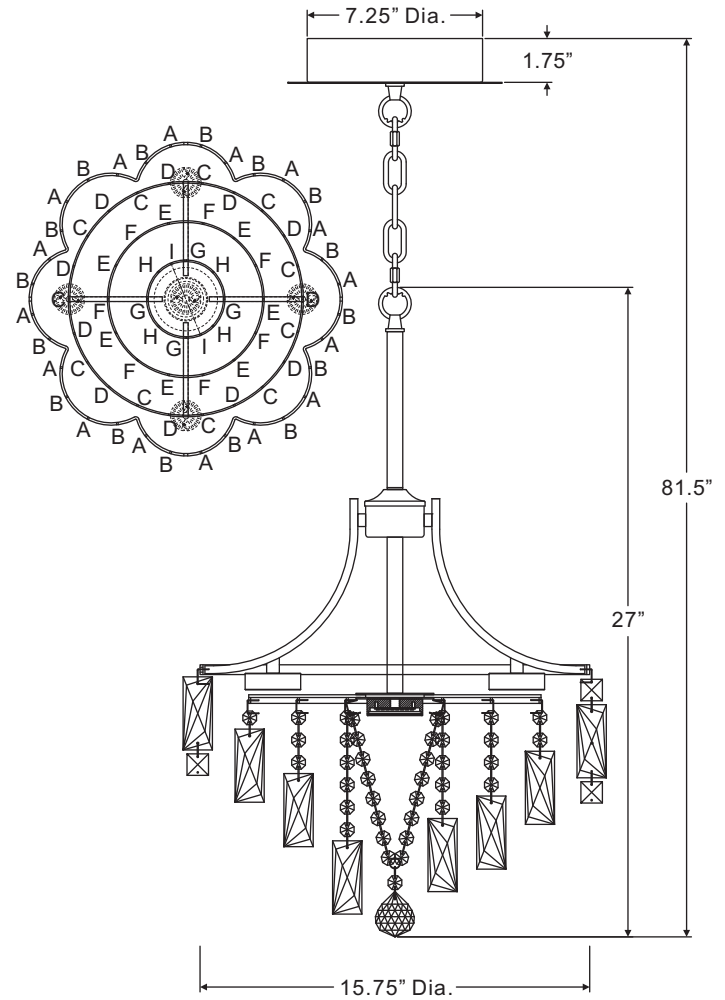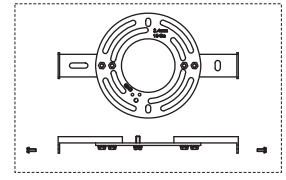

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"