
For Style 1032P6-1 Assembly Instruction Sheet #IS-1032P6-1-S

driver, pilers, who culters, who etrippers, electrical tape, safety glasses

ration: identify and inspect all parts before beginning installation. Check package content let and diagrams below to be sure all parts are nt. If any parts are miseing or damaged, do not attempt to assemble, install, or operate the ficture. Contect customer service for replacemen Source: (1) G9 40W Maximum(Not Include), usind Assembly Time: 10-20 minutes valont identity and increase.

These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electrician perform the installation. rum off electricity at circuit breaker or main fuae box before installation. Consult a licensed electricisn if in doubt

Disconnect fluture from power source before repiscing builbs. Make sure builts are given sufficient time to coci before removal

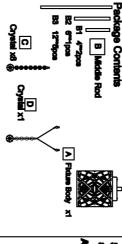

888≥ PAR Hardware Contents Electrical Marrets Outlet Box Screw DESCRIPTION QUANTITY
Decorative Cape 2pcs 2222

Hand tighten until snug

₽8 ğ 8 THE CO

Mounting Screw

A. Thread the power cord to the Middle Rods , fix the Middle Rods with Calling the fathers body

The fathers body STEP 1 - Install Rods to Fixture Body the fxture body then the same

훒 A(Fixture Body)

with the Rods. finally fix the Canopy other pieces of Rods to connect the %

> Alline up a set of holes on the STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracks Nuts onto the Mounting bracket (EE). Pass Lock Screws (DD) into the and Holes on the celling Mounting bracket (EE) Screws (DD). Washers and thread Hex canopy. Thread Mounting loles on the Mounting ġ

À


A.Pass the supply wires through the Mounting STEP 3 - Attach Mounting bracket to Outlet Box Screw facing you. Secure It the Outlet Box with the head of the Green Ground bracket (EE). Attach the Mounting bracket (EE) to

Figure 1

with Outlet Box Screws (CC). lighten until snug Outlet Box Screws Ground Wire Supply Wires with Figure 2 Outlet Box 8 M


> A. Fit the ceiling campy to Mounting Screwe (DD) and secure with Decorative Cape (AA). Note: The ceiling campy should be anua gainst the ceiling and the Decorative Cape (AA). If not, adjust the length of the Mounting Screwe (DD) by unscrewing the Hex Nut and Lock Washer and then STEP 4 - Fit Ceiling Canopy to Mounting bracket Ass bracket (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Decorative Caps (AA) ing Mounting Screws (DD) in or out of the Mounting


and ceiling canopy and proceed to Step 5.



STEP 5 - Wire Connections


A. Use standard wire connectors to make all wire connections. Twist connectors until wires are signity joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



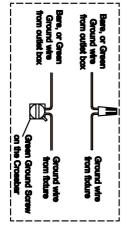

A. Carefully tuck all wires into the outlet box and por STEP 6 - Install Ceiling Canopy to Ceiling ceiling canopy of the Fbdure Body (A) over the cullet box.
Align the holes in the ceiling canopy with the Mounting rs (DD). Secure with Decorative Caps (AA) and hand

Canopy ⋛



A. Install bulbs (Not Include) onto sockets and push STEP 7 - Install Crystal and Bulbs. snug into place.

B.Please put the crystal (1)(2) to the Fixture Body (A)

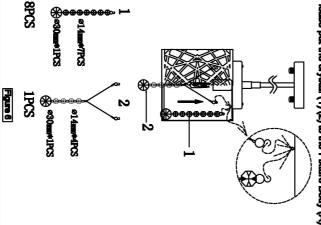


Figure 4