








Assembly Instruction Sheet #IS-8003C20 For Style 8003C20

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (8) E12 60W Incandescent (Not Included).
Estimated Assembly Time: 10-20 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

	30mm*1PCS 28mm*1PCS 68mm*1PCS 10mm*1PCS 10mm*1PCS 14mm*1PCS
	1 Crystal x43
	1 8mm*1PCS 1 14mm*1PCS 1 12mm*1PCS
	1 40mm x1 3 Crystal x1
	
Hardware Contents	
PART DESCRIPTION	QUANTITY
BB Wire nut	2pcs
CC Outlet Box Screw	2pcs
BB	
CC	

STEP 1 - Release Mounting Bracket from Ceiling Canopy.

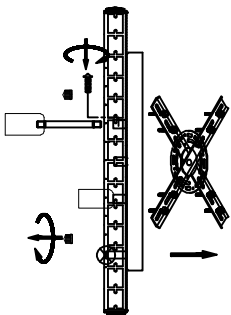


Figure 1

STEP 2- Install Ring to Fixture Body.

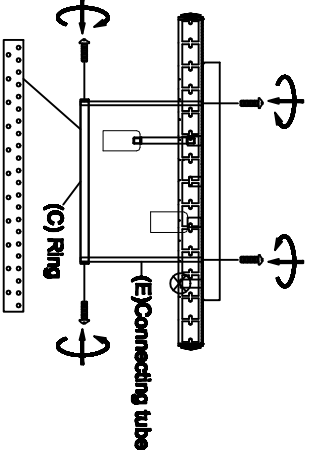


Figure 2

STEP 3 - Attach Mounting bracket to Outlet Box.
 Appear the supply wires through the Mounting bracket (EE) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

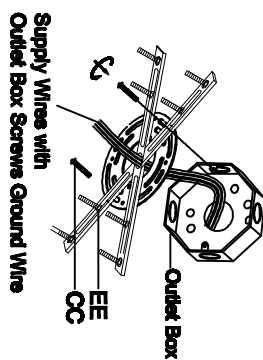


Figure 3

STEP 3 - Wire Connections
 A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

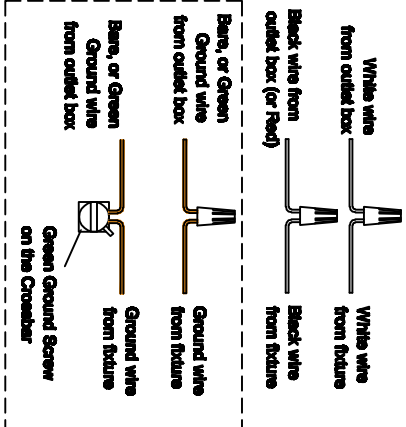


Figure 4

STEP 4 - Install Ceiling Canopy to Ceiling

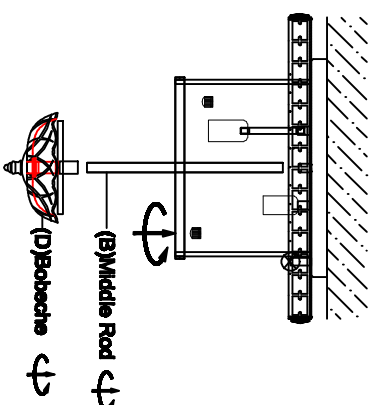


Figure 5

STEP 6 - Install bulbs and Crystals

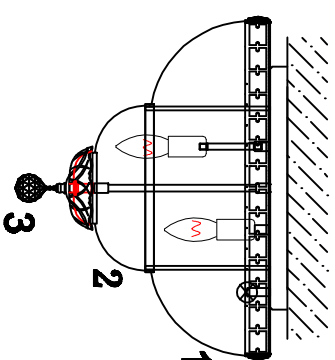


Figure 6