


Collection: Resolute

Installation manual for: LD4061D10 L9.4"W9.4"H8.7"L1

## Installation instructions:

- 1. Using the screw (P3) secure the mounting bracket (P1) to the junction box.
- 2. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 3. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 4. "E" wire from the fixture is attached to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 5.M4 screw (P2)pass through the holes in canopy plate and tighten by nut (P6).
- 6.Install the metal pipe (P8) to the wire lock (P9).
- 7.Install the bulb(not included) in lamp holder (P12).

The end!

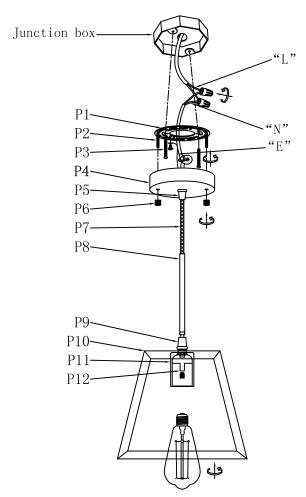

## PARTS LIST

part picture Description Qty Check list

part	picture	Description	Qty	Спеск	IISt
P1		<b>Ø</b> 4.0" Mounting bracket	1		
P2		M4 Screw	2		
Р3		5/32-32 Screw	2		
P4		<b>∅</b> 4.7″ Canopy plat	1		
P5		Ø0.7″Wire lock	1		
Р6	•	Nut	2		
P7	~	Power Cord 59" 18# Black	1		
P8		L5.9"Metal pipe	1		
Р9	Д	Ø0.8″Wire lock	1		
P10		L9.4"Lampshade	1		
P11		E26 Lamp cup	1		
P12		E26 Lamp holder	1		

"L" = Hot wire

"N" = Neutral wire

 $^{\prime\prime}E^{\prime\prime} = Ground wire$