



ASSEMBLY INSTRUCTIONS



TO assemble safety cables:

1. Join fixture safety cables with safety cable from ceiling.
2. Wrap both safety cable around the cable lock nut.
3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
4. Push the cable lock nut into junction box.

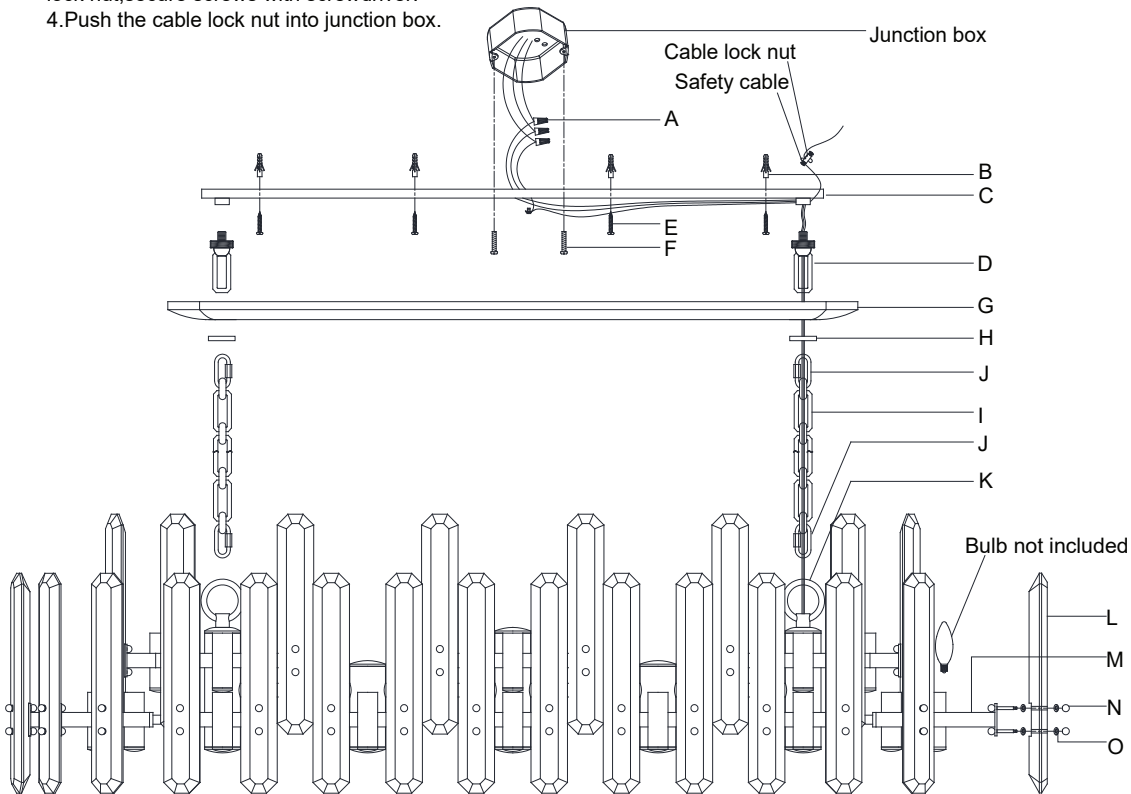

Bonnington Large Linear Chandelier

Item # ARN 5127

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.


1. Carefully remove all parts from the box.
2. Put the mounting plate (C) on the ceiling and mark the holes position with pencil (not included).
3. Drill holes on the ceiling and knock the anchors (B) into the holes.
4. Install the mounting plate (C) to the junction box and secure with the mounting screws (F), then secure the wood screws (E) to the anchors (B) and lock tight.
5. Remove the collar loop (D) from the chain (I) by unscrewing the quick link (J).
6. Thread the collar loop (D) to the mounting plate (C).
7. Install the canopy (G) to the collar loop (D) and secure with the collar ring (H).
8. With the fixture desired height, shorten the chain (I) as needed using the chain pliers (not included).
9. Open the chain quick link (J), then attach the chain quick link (J) to the collar loop (D). Secure the chain quick link (J).
10. Open the chain quick link (J) from the opposite side then attach to the fixture loop (K). Secure the chain quick link (J).
11. Weave the fixture wires and safety cable through the chain (I).
12. When you reach the canopy and the collar loop (D), measure the wires then cut, be certain to leave enough length to connect the wire in the junction box.
13. Strip the insulation on the fixture wires about 5/8".
14. Loosen the collar ring (H) and let the canopy (G) slip down the chain (I) carefully.
15. Twist the fixture wires and safety cable together and push through the center hole of the collar loop (D).

ASSEMBLY INSTRUCTIONS



TO assemble safety cables:

1. Join fixture safety cables with safety cable from ceiling.
2. Wrap both safety cable around the cable lock nut.
3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
4. Push the cable lock nut into junction box.

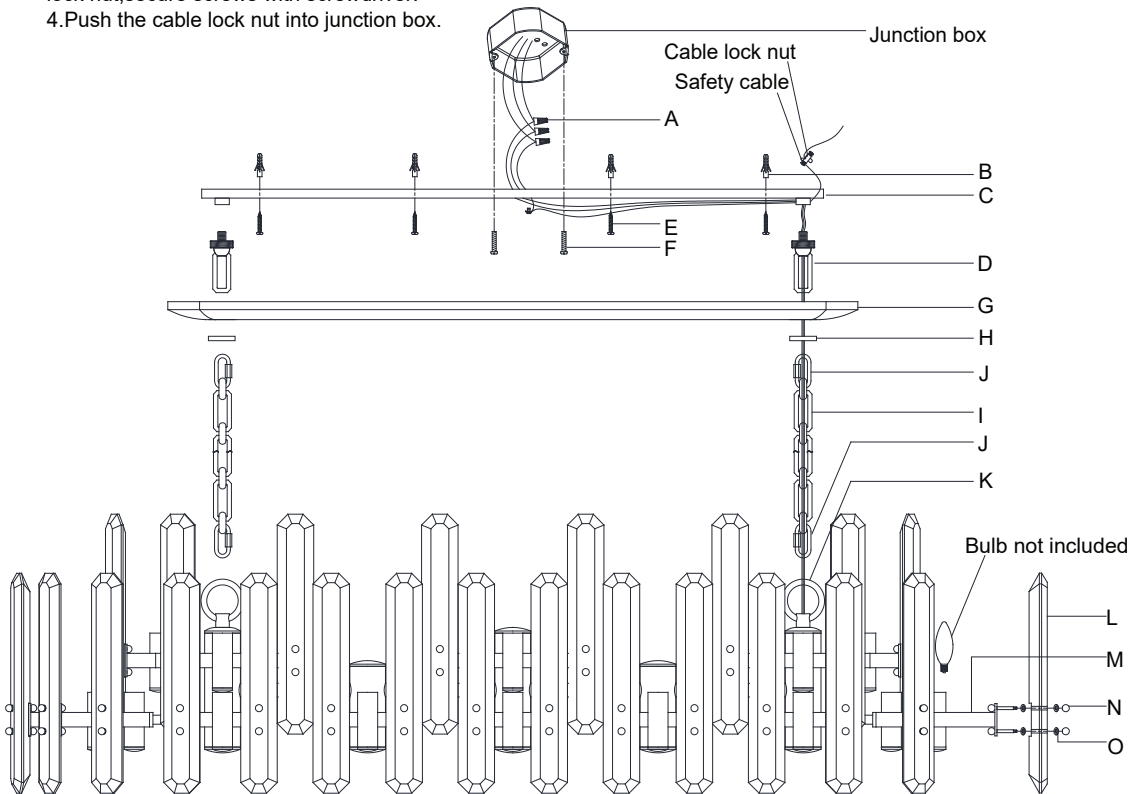

Bonnington Large Linear Chandelier

Item # ARN 5127

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

16. Connect the safety cable as shown in diagram.
15. Connect the fixture ground wire to the ground wire in the junction box using the wire nut (A). IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
16. Connect the fixture ribbed wire (no markings) to the neutral wire in the junction box using the wire nut (A).
17. Connect the fixture smooth wire (with markings) to the hot wire in the junction box using the wire nut (A).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
18. Carefully tuck the wire connections into the junction box.
19. Install the canopy (G) to the junction box and secure with the collar ring (H).
20. Insert bulbs (not included) into the sockets.
21. Loosen the ball nuts (N) and remove one rubber washer (O) from nipple.
22. Attach the crystal bar (L) to the bracket (M), then secure with the rubber washer (O) and ball nuts (N).
23. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.